POP GUIDE

Placement Starting 11/27/06

Includes:

Wii Zelda Twilight Princess Interactive Update

POP Guide
by
Account

Game Crazy

Items Included in Retailer Kit:

62696 Instruct, Advisory Disp Wii Rtlr	(N) -	If it's not already there, place in Binder under Miscellaneous
62495 Controller, Nunchuk White RVL Disp	(N) -	Install in the store's Wii HW used for interactivity
62763 Demo, Gpk RVL Zelda TP – PT	(N) -	Install in the store's Wii HW used for interactivity Replace Excite Truck- SEND EXCITE TRUCK BACK TO NOA CORP.

GameStop

Includes Babbages, Funco, Software Etc., EB Games, EB World

Items Included in Retailer Kit:

62495 Controller, Nunchuk White RVL Disp	(N) -	RVLM06F
62501 Cable, Component Video RVL Disp	(N) -	RVLM06F
62763 Demo, Gpk RVL Zelda TP – PT*	(N) -	RVLM06F – Replace Excite Truck SEND EXCITE TRUCK BACK TO NOA CORP
62789 Graphic, RVLM06F Zelda TP L	(N) -	RVLM06F – replace current Wii graphic in Left plastic sleeve
62790 Graphic, RVLM06F Zelda TP R	(N) -	RVLM06F – replace current Wii graphic in Right plastic sleeve

---

Toys "R" Us

Items Included in Retailer Kit:

48536 Holder, Cable w/ Adhesive	(N6x) -	Use to tie necessary cables down on the Wii Tall Endcap for TV & Flashplayer

---

Wal-Mart

Items Sent Direct to Store:

62477 Disp, Pallet WM Micro/Mario*	(D) -	Sent to arrive by & be displayed on Fri, 11/24

0 00000 62477 0

* - Indicates that you must scan the barcode on this item.

Sell Sheets

Generic Wii Kit
627344

Zelda Twilight Princess (Wii) Interactive Update

*Scan this UPC for tracking

Demo, Gpk RVL Zelda TP - PT
62763
NMI: RVLM06F, Replace Excite Truck
***Send Excite Truck back to the NOA Corp.**

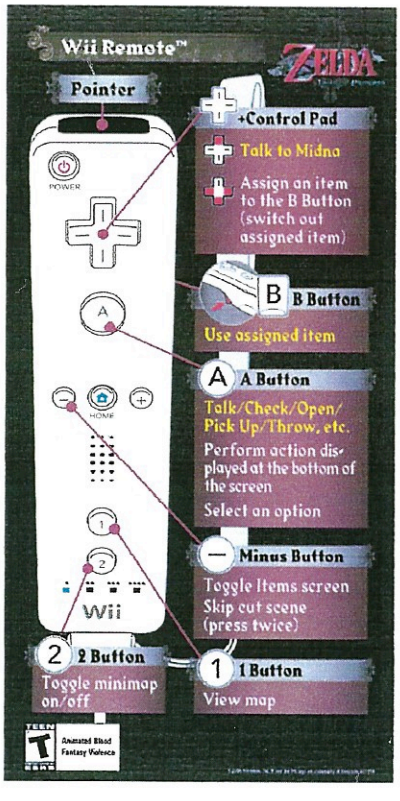

Graphic, RVLM06F Zelda TP L
62789
NMI: RVLM06F - replace Wii Graphic
in left plastic sleeve on interactive

Graphic, RVLM06F Zelda TP R
62790
NMI: RVLM06F - replace Wii Graphic in right
plastic sleeve on interactive

Instruction Sheets

ZELDA GAME AND COMPONENT CABLE SWAP KIT

This Kit Contains:

- 1 x Zelda: Twilight Princess Demo Disc
- 1 x Zelda: Twilight Princess Left-Hand Graphic Card
- 1 x Zelda: Twilight Princess Right-Hand Graphic Card
- 1 x Nunchuk
- 1 x Component Cable
- This Instruction Sheet

1. Unlock the rear of the display.

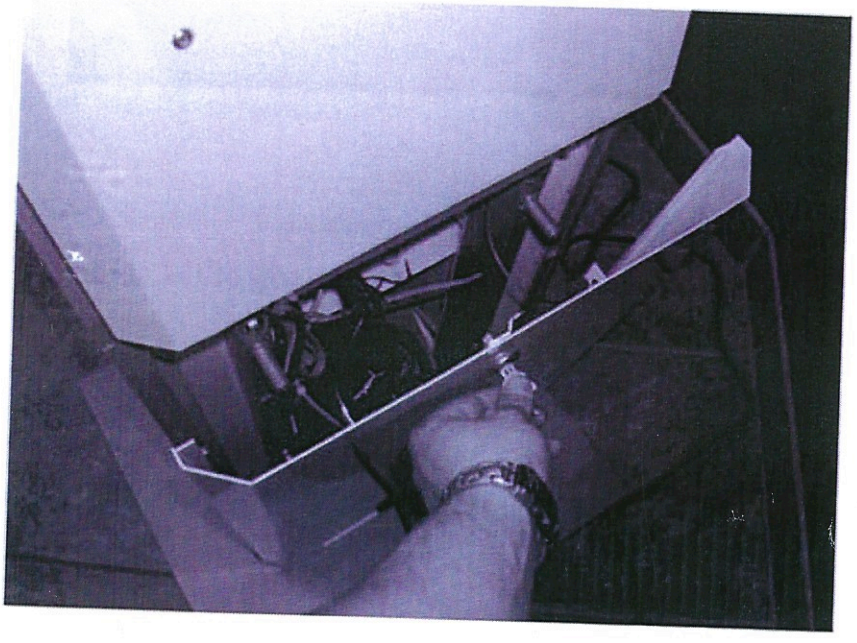

2. Turn the display OFF.

Nintendo®

3. Remove the four wing nuts from the bottom of the pod cover.

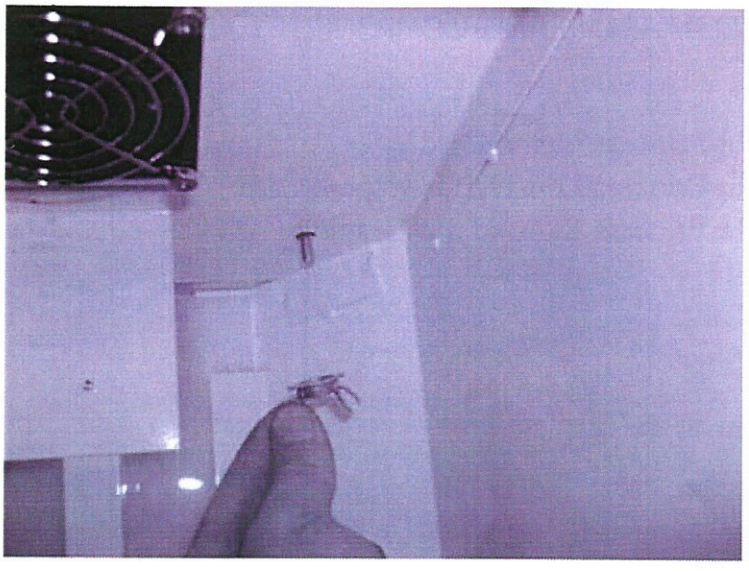

4. Remove the pod cover.
5. Disconnect AV cable from the Wii.
6. Use the TORX bit to remove the screw from the top of the shroud. This will release the remote at the same time.

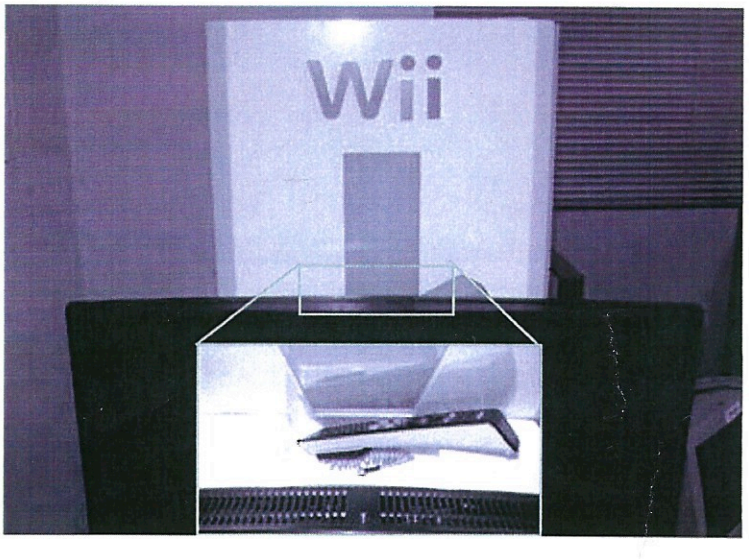

Nintendo®

7. Carefully PUSH the shroud up. The shroud is very tight, and it is easier to push it up than pull it up.

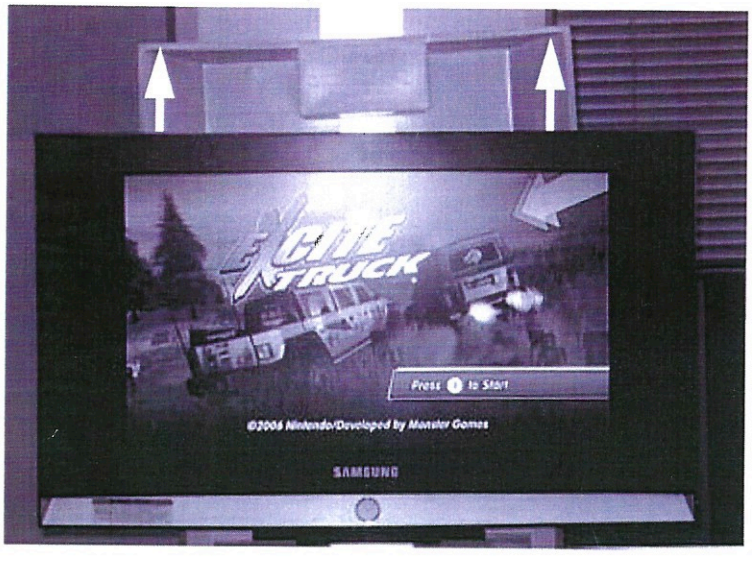

8. Remove the AV cables from the rear of the TV.
9. Use the TORX bit to remove the four screws from the rear panel.

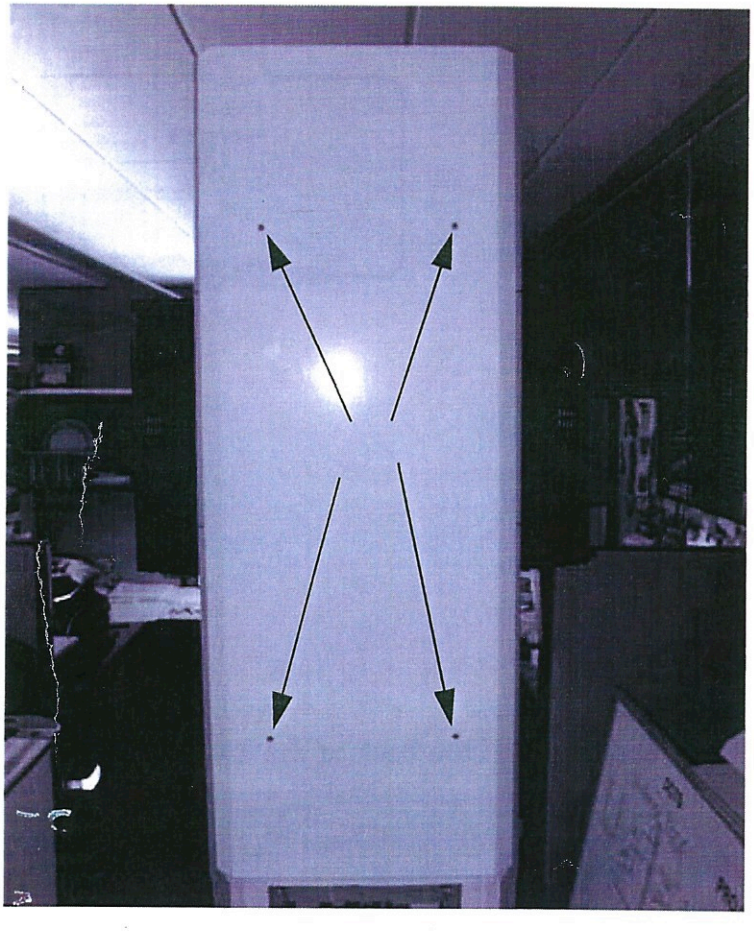

10. Lift the rear panel off of the display.

Nintendo®

11. Remove the AV cable from the display. You may need to cut wire routing zip-ties.

12. Route the multi-colored end of the component cable through the top hole, and the single connector end under the divider into the pod.

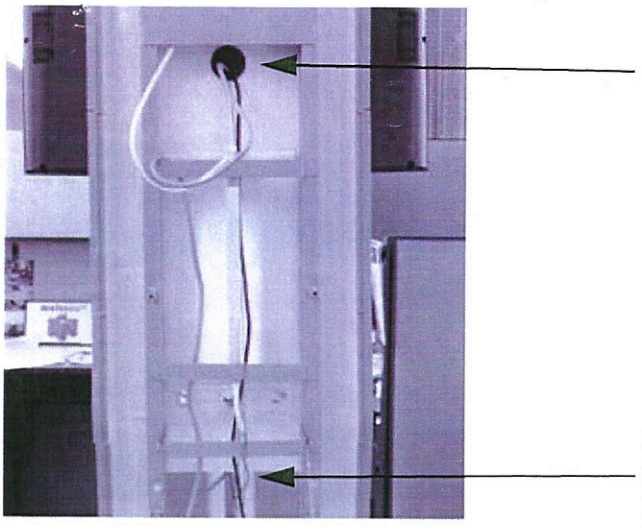

13. Connect the component cable to the back of the Wii.

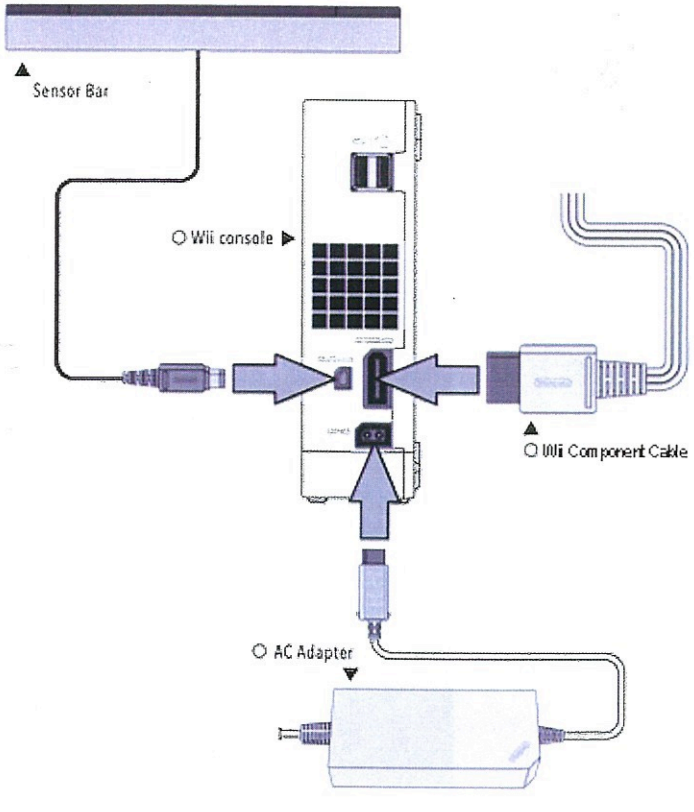

14. Connect the component cable to the back of the TV.

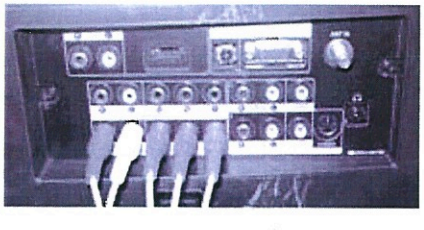

Nintendo®

15. Turn the display ON.
16. Look to see if the cables are creating shadows in the display lights. If they are, move the routing of the cable to minimize the shadows.
17. Press the "Menu" button on the TV remote.
18. Press the right arrow on the TV remote to go to "Source List."
19. Press the right arrow on the TV remote again to bring up the list of available inputs.
20. Use the down arrow on the TV remote to select "Component 1."
21. Press the "Enter" button.
22. Make sure you feed the wrist strap's cord through the connector hook.
23. Insert the Nunchuk plug into the External Extension Connector on the bottom of the remote.

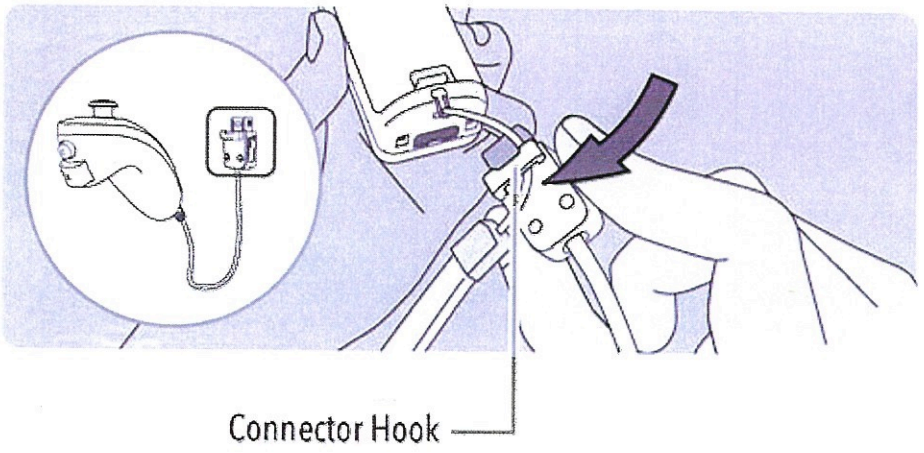

24. Eject the game. Insert the Zelda demo disc.
25. Use the Wii Remote to select the disc channel (the Zelda game) by pointing toward it and pushing the A Button.
26. Reattach the rear and pod covers, reattach the shroud and TV remote, and lock the display.
27. Remove the old graphic cards and install the new ones.

Do you have any questions or need assistance?
For help call 1-800-875-1852.